



9. Pull out memory clip 1 and slide it into 2



10. Night temperature set-back. In case of central regulation, leave thermostat on daytime setting.

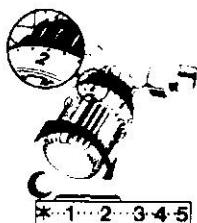


11. Comfort heating

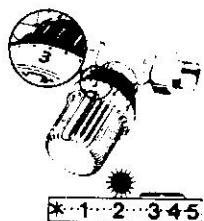

Temperature settings.

Symbol	*	•	•	•	1	•	•	•	2	•	•	•	3	•	•	•	4	•	•	•	5
°C	6	10	15	18	20	23	26														
°F	43	50	60	65	68	73	79														

 

INSTALLATION INSTRUCTIONS

T. L . C.

THERMOSTATIC LIMIT CONTROL


DIRECT/REMOTE OPERATORS




1. Set the thermostat switch on position 5.




5. Limitation on position 3 (example)

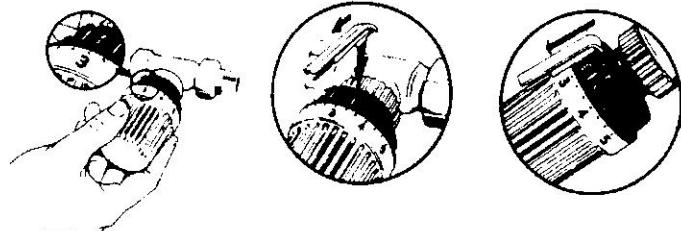

2. Mount the thermostat onto the valve body.

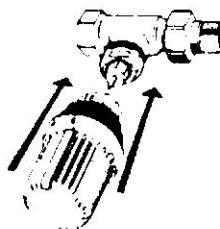


6. Locking on position 3 (example)

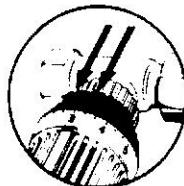


3. Fasten the tightening nut with curved jaw pliers



7. Take off the limitation on position 3

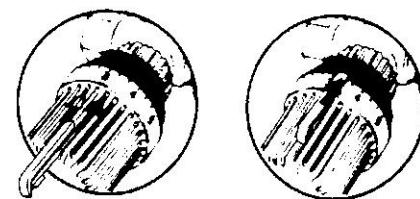

4. Re-set on desired setting 3 (example)

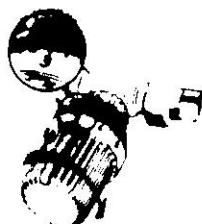

8. For freeze protection, set the thermostat on position *

