



# **DIMENSIONS**

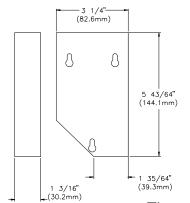

Thermostat

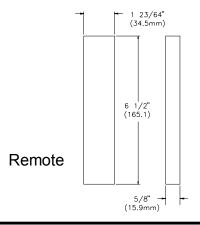

## **ELECTRONIC PROPORTIONAL**

# THERMOSTAT series TE91 series TF91 with Remote Control

For proportional control of central (main) or zoned heating and cooling systems.

# **BENEFITS & SPECIAL FEATURES**

#### TE91 and TF91 series:

- Proportional output provides fast and accurate positioning for zone actuators and valves.
- No batteries required.
- Proportional integral control eliminates overshoot and droop.
- Adjustable dead band prevents overlapping between heating and cooling modes.
- Manual on/off override.
- Electronic temperature limiting and locking.
- Automatic heating/cooling changeover.
- Continuous (on) or intermittent (auto) fan.
- Direct or reverse acting outputs.
- System status indicators.
- Adjustable differential band.

#### TF91 series:

- Infra-red remote control internal receiver (standard).
- Infra-red remote control transmitter (optional).
- Infra-red remote control external receiver (optional).

# **SPECIFICATIONS**

 Operating Voltage:
 24 vac (-15%, +10%, 50-60 Hz)

 Output:
 0-10 VDC or 4-20mA

 Temperature Range:
 50° F - 90° F (10° C - 32° C)

 Temperature Differential:

Dead Band: Adjustable 0 - 4° F (2.2° C) to set point
Sensor System: Negative Temperature Coefficient (NTC)

Standard: internal
Optional: remote temperature sensor
Optional: return air temperature sensor

Switches:

Push-button:
ON/OFF
Rotating:
SET TEMPERATURE

Slide: MODE: HEAT/AUTO/COOL Slide: FAN: AUTO/ON Indicator LED's: ON (Green)


Security: Electronic temperature limiting and locking Dimensions: Thermostat:  $5^{43}_{/64} \times 3^{1/4} \times 1^{3}_{/16}$  Inches (144.1 x 82.6 x 30.2 mm) Remote:  $6^{1/2} \times 1^{23}_{/64} \times 5^{1/8}$  Inches (165.1 x 34.5 x 15.9 mm)

Remote Control Transmitter (optional): 7-button infra-red

Battery: (2) AAA
Range: 36' (10 meters)
Remote Control Receiver (optional): infra-red

Range: 36' (10 meters)

# MODEL NUMBERS AND DESCRIPTIONS FOR VARIOUS APPLICATIONS

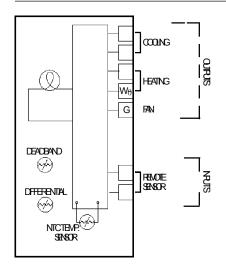

Model Number: TE911120

Description: 1 stage heat, 1 stage cool

Switching Current at 24 VAC:


 Cooling:
 1 Amp

 Heating:
 1 Amp

 Fan:
 1 Amp

 Weight:
 .4 lbs. (880 g)

\*Warmer/cooler scale is standard

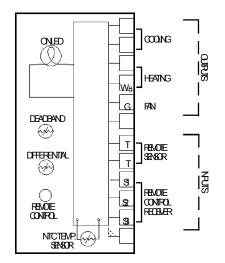

Model Number: TF911120

Description: 1 stage heat, 1 stage cool

Switching Current at 24 VAC:

 Cooling:
 1 Amp

 Heating:
 1 Amp

 Fan:
 1 Amp

 Weight:
 .4 lbs. (880 g)

#### **ACCESSORIES**

Remote Temperature Sensor TX101001

Return Air Temperature Sensor TX101011

Remote Control Transmitter TX502001

(Compatible with internal and external remote control receivers.)

Remote Control Receiver (external) TX503001 (May be located in other rooms and wired to thermostat. Receives signal from transmitter.)

Transformers:

40 VA TR140100 20 VA TR120100

Relay Transformers:

20 VA (2) SPST 120 VAC relay TR440200 20 VA (1) SPST 120 VAC relay TR440300

## **APPLICATIONS**

- Central (main) heating or cooling.
- Zone heating or cooling.
- Residential. (Single or multi-family, Apartments, Co-ops, Condominiums)
- Commercial. (Stores, Restaurants, Offices)
- Industrial
- Institutional. (Hospitals, Hotels, Motels)

#### **REFERENCES**

For More Information On: See: Wiring, jumper, potentiometer settings and applications Instruction sheet Other thermostats This section Zone Actuators Star Actuator section Zone Valves Star Valve section Wiring Panels Control Panels section Price section Suggested pricing Warrantv Warranty section

